



Camel Trophy Outdoor Event 2000 Special Ana-Digi

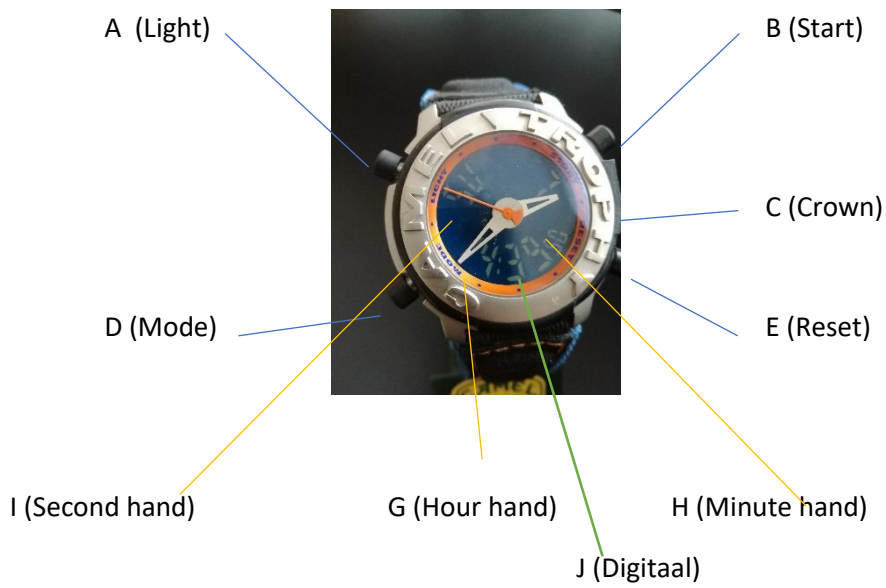

Digitaal

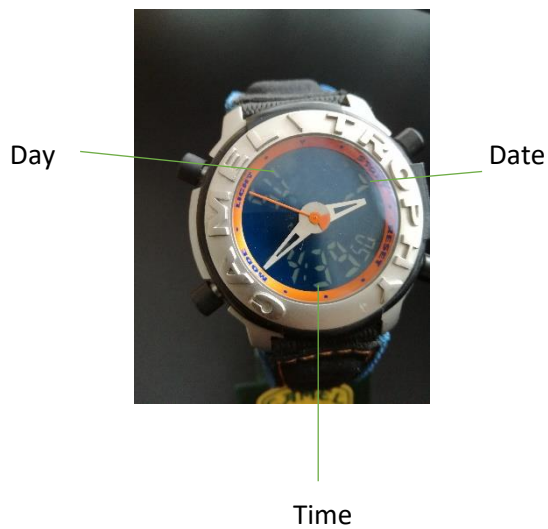

Lighting

A (Light) Press and hold if necessary

Analogue Set time

Pull out crown C - Turn - Set hands G and H to the time

Then press Crown C.

Mode

- D Press successively and digital positions are displayed:
Chrono - Timer - Alarm - Time / Time

Tijd Digitaal

- D (mode) Press until digital day-date-time
D pressed for 2 seconds, second flashes
B press to: seconds - minutes - hours - year - month - day -24/12
E Adjust during flashing with "E" (reset)
D Done "D"

Chrono

- D (Mode) Press until "Chrono" is visible on the watch face
B Start - Stop - Start - Stop
E (reset) back to "0"

Timer (Counts down)

- | | |
|----------|--|
| D (Mode) | Press until "Timer" is visible on the watch face |
| D | Press for 2 seconds. Hour flashes |
| E | Enter the number of hours |
| B | Minutes flashes |
| E | Enter the number of minutes |
| D | Confirmation |
| B | Start - Stop - Start to "peep" |
| B | Stops "peep" |

Alarm

D (Mode) Press until “Alarm” is visible on the watch face

D Press for 2 seconds

H ours flash

E Set the time

B Minutes flash

E Set the time

D Confirm

EXTRA ALARM

It is possible to activate an alarm time to, for example, receive a signal in half an hour”

D (Mode) Make sure digital time screen is set to watch face.

B (start) Presumably the current time will now appear on the screen at the top of the screen

B (Start) Press again. Minutes add up to a time you want to be notified.

E (Reset) Possibly back in time

D Return to home screen on watch face

Remove dial / digital time and date selection (temporarily)



E (Reset)

E (Reset)

Pressing this will successively disappear from the screen:

Time - Date

Pressing it again will return everything to it scherm